

How to Replace the Blind Tilter

Instructions for replacing the blind tilt for horizontal blinds:

1. Remove blinds from the window.
2. Remove the end stiffener from the opposite end of the headrail where the tilt mechanism is located.
3. Slide the tilt rod out of the tilter to free the mechanism. Do not slide tilt rod out of the drum.
4. Snap-out the tilt mechanism
5. Replace the tilt mechanism with the new one. Make sure the new tilt mechanism is fully seated in the control route/punch of the headrail.
6. Slide the tilt rod into the new tilt mechanism.
7. Replace the end stiffener.

