

# HOW TO REWIND A CORD TILTER

1. Locate hole in backside of wheel on cord tilt mechanism (see arrow in picture to right).



2. Feed one end of approximately 11 feet of cord through hole in wheel.



3. Pull half of length of cord through wheel.



4. Cross over cord on wheel through slots.




5. Feed end of crossed-over cord back through hole in wheel. Do not put cord into holes of hinged part of tilt mechanism.



6. With same side of cord set in slot on wheel and then wrap cord four times around wheel in a clockwise direction.




7. With other end of cord, set in slot on front of wheel and wrap cord in the opposite direction, counter-clockwise, four times.

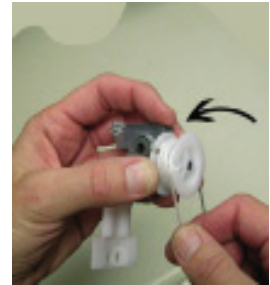

8. Feed each end of cord into holes of hinged part of tilt mechanism.



9. Fold up hinged part of tilt mechanism and test cording by pulling on one end of cord and then the other to ensure smooth operation of tilt mechanism.

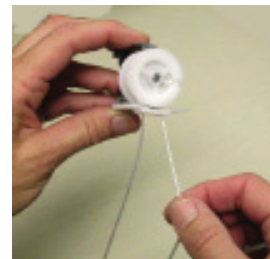

10. Install Tilter in headrail, see [\*How to Replace the Blind Tilter.\*](#)