



REMOVING LOOP CORD FROM CORD TENSIONER

1. If secured to the wall, remove the screw to release the cord tensioner.
2. Use a small blade flat head screw driver to pry out the plastic cap on the cord tensioner.

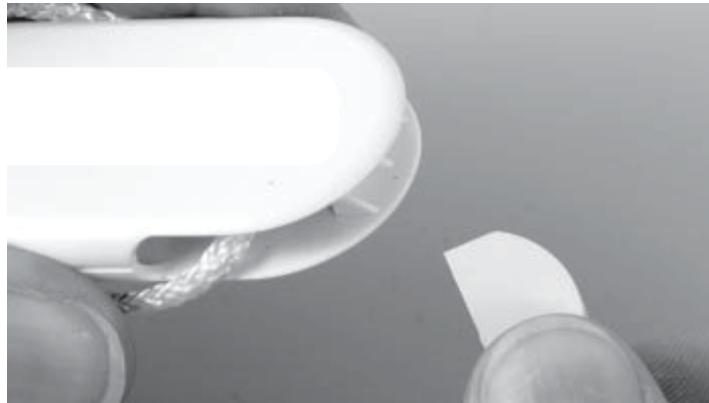

3. Spread open the two halves of the cord tensioner just enough to remove the cord. Be careful not to break the cord tensioner by pulling it apart.

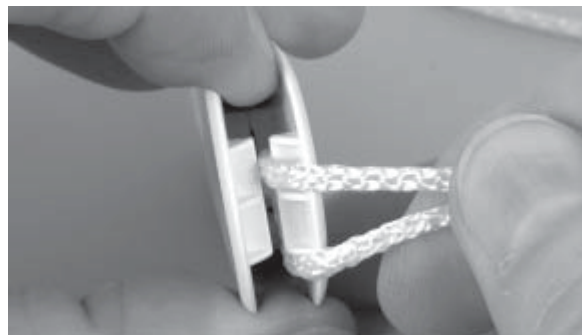


ATTACH LOOP CORD INTO TENSIONER

1. Spread open the two halves of the cord tensioner just enough to insert the cord. Be careful not to break the cord tensioner by pulling it apart.



2. Slide the plastic clip into the cord tensioner and use needle nose pliers to push it into place.

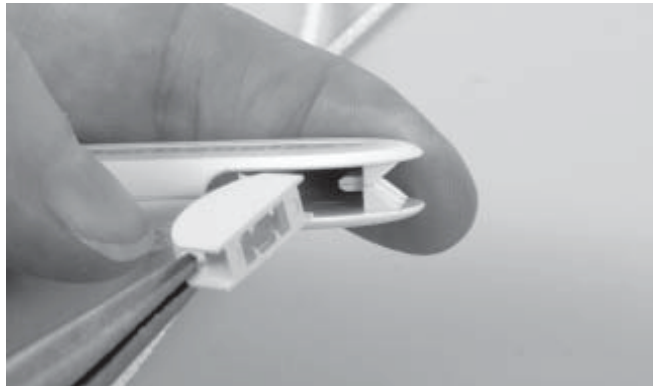

3. Reinstall the cord tensioner and secure it properly (see the instructions included with the cord tensioner).

