



To start the process make sure that the shade is in the fully up position with all of the lift cord wrapped onto the lift spool.

Pull the lift rod out of the end of the headrail about 1 1/2". Be careful not to let the shaft come out of one spool and lose alignment between spools.


Orient the motor with the short side towards the opposite side from the lift rod as illustrated. "Top" is also printed on the motor for orientation purposes and should always face the top of the rail. Insert the motor onto the lift rod aligning the key ways.

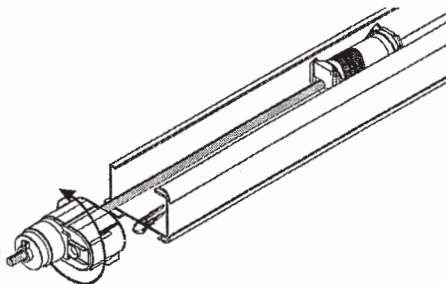

Spin the motor 2 times. If there is any doubt which way to turn the rod, "Turn Rod" is printed on the end of the unit. This shows which way the LIFT ROD must spin to "load" the motor. **NOTE: DO NOT TURN THE WRONG WAY.**

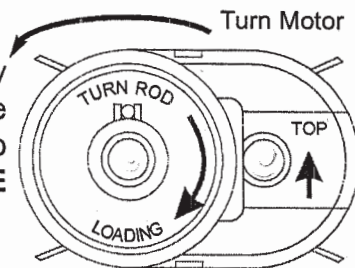

Push the motor into the end of the headrail.

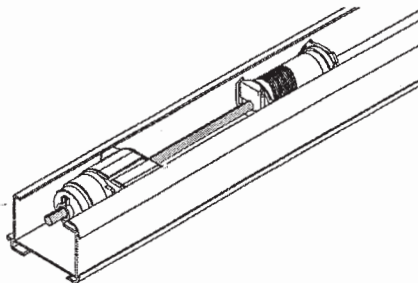

When all motors have been installed, make sure that the lift rod is fully pushed into the headrail so that the end cap can be inserted later.