



HOW TO MEASURE: CASSETTE ROMAN SHADES

Please use a steel tape measure to ensure the proper measurements.
 Measure to the nearest eighth of an inch (1/8").
 Measure each window individually even if they look the same.
 Always measure and record the width first, then height.
 Reversing the width measurement for the height measurement is the most common ordering mistake.

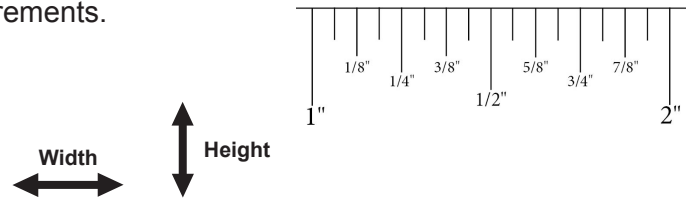

Inside Mount

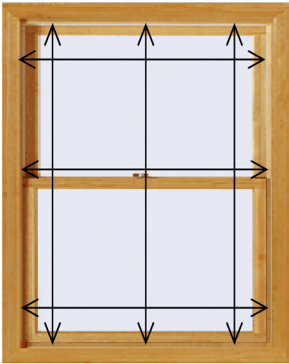

Step 1. Measure the width of the opening at the top, middle, and bottom of window. Record the narrowest of the 3 measurements. This is your ordering width. The factory will make the necessary deductions to ensure a proper fit. **DO NOT TAKE A DEDUCTION.**

Step 2. Measure the height of the opening on the left, center, and right. Record the longest of the 3 measurements. This is your ordering height.

Please note: Inside mount measurements represent the exact window opening, do not add to or subtract from your measurements. Factory deductions: 3/16" from headrail width, 1" from fabric width and 1/8" from height.

Minimum Depth

You'll need this much unobstructed depth, including cranks, handles, locks, etc., to inside mount this treatment.



Flush Mount

For the face of your treatment to be flush with the wall or window frame, your frame depth must be the same or greater than the Flush Mount depth required.


	Minimum Depth Required	Flush Mount
Cassette Roman	1"	3 7/8"

End Mount

End mount shades are installed in windows that do not have a top frame such as windows that incorporate an arch. Cassette Roman Shades require 1 1/2" mounting surface depth and can be ordered up to 48" wide.

Please note: Deductions for end mount shades are greater than inside mount, the finished headrail width will be 11/16" less than the ordered width.

Outside Mount

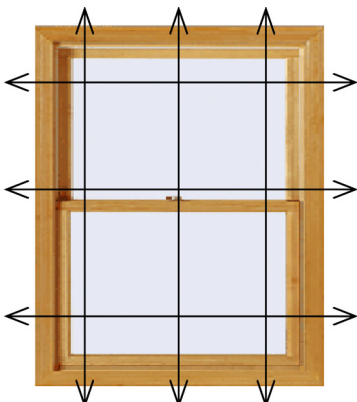

Step 1. Measure the width of the area you wish to cover. Measure in 3 places across the top, center and bottom of the window. Record the largest of the 3 measurements. We recommend adding overlap to reduce light leakage around the blind. See *Recommended Overlap*. This is your ordering width.

Step 2. Decide if the headrail will be installed on or above the window molding. You will need a flat surface area. Measure the height of the area you wish to cover. This is your ordering height.

Please note: Outside mount measurements represent the exact blind size. **PROVIDE EXACT DIMENSIONS.** Factory deductions: 0" from headrail width, 3/4" from fabric width, and 1/8" from height.

	OB Mounting Surface Required	Recommended Overlap - Width	Recommended Overlap - Height
Cassette Roman	1"	4" each side	3 1/4" above

Please see Product Stacking Considerations on the next page.

Product Stacking Considerations

Cassette Roman shades roll up into the headrail and the shade disappears. The area of your window covered when your window treatment is fully raised is equal to the height of the cassette rail system - 3 1/4". If you feel too much of the window will be covered, consider Outside Mount.



Typically, when Cassette Roman Shades are fully raised, only a portion of the bottom rail remains visible under the headrail. In some instances, a fabric fold may not be completely concealed inside the headrail and may be visible behind the bottomrail. This is a normal and inherent characteristic of this product and not considered a defect.