




HOW TO MEASURE: NATURAL SHADES

Please use a steel tape measure to ensure the proper measurements.
 Measure to the nearest eighth of an inch (1/8").
 Measure each window individually even if they look the same.
 Always measure and record the width first, then height.
 Reversing the width measurement for the height measurement is the most common ordering mistake.

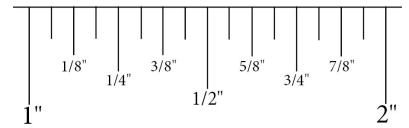

Inside Mount

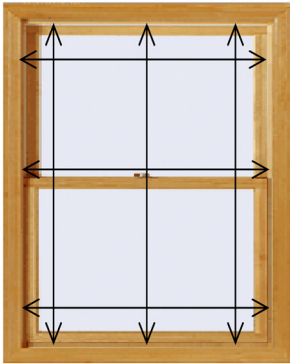

Step 1. Measure the width of the opening at the top, middle, and bottom of window. Record the narrowest of the 3 measurements. This is your ordering width. The factory will make the necessary deductions to ensure a proper fit. **DO NOT TAKE A DEDUCTION.**

Step 2. Measure the height of the opening on the left, center, and right. Record the longest of the 3 measurements. This is your ordering height.

Please note: Inside mount measurements represent the exact window opening, do not add to or subtract from your measurements.

Factory deductions:

Shades - 1 1/4" from rail width and 1/2" from fabric width.

Arch - 1/2" from width and 1/4" from height.


Folding Panel - 1/2" from width and 1/2" from height.

Minimum Depth

You'll need this much unobstructed depth, including cranks, handles, locks, etc., to inside mount this treatment.

Flush Mount

For the face of your treatment to be flush with the wall or window frame, your frame depth must be the same or greater than the Flush Mount depth required.

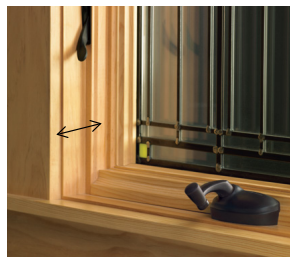


	Minimum Depth Required	Flush Mount	Flush Mount Crown Valance	Flush Mount Woven Valance
Standard Shade	1"	2"	N/A	N/A
Ez Lift Continuous Cord Control	1 1/2"	3"	N/A	N/A
Motorized - Battery Powered	1 1/2"	3"	N/A	N/A
Motorized - AC Motor	2"	4 1/4"	N/A	N/A
Arch	1 1/2"	1 5/8" to 1 7/8"	N/A	N/A
Folding Panel (no valance)	2 3/4"	4 1/2"	N/A	N/A
Folding Panel (with valance)	N/A	N/A	6"	5 1/2"
Panel Track	see Panel Track measure page			

Panel Length

The Folding Panel fabric length for an inside mount shade with no valance or a crown valance will measure 1 7/8" less than ordered height.
 The Folding Panel fabric length for an inside mount shade with a woven wood valance will measure 2 5/8" less than the ordered height.

Outside Mount

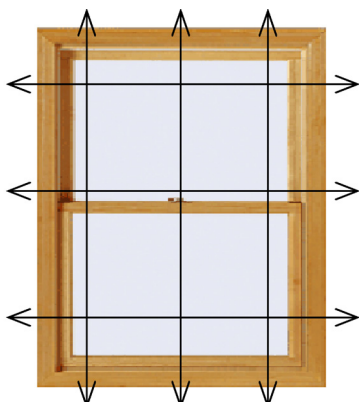

Step 1. Measure the width of the area you wish to cover. Measure in 3 places across the top, center and bottom of the window. Record the largest of the 3 measurements. We recommend adding overlap to reduce light leakage around the See *Recommended Overlap*. This is your ordering width.

Step 2. Decide if the headrail will be installed on or above the window molding. You will need a flat surface area. Measure the height of the area you wish to cover. This is your ordering height.

Please note: Outside mount measurements represent the exact blind size. No deductions will be made by the factory. **PROVIDE EXACT DIMENSIONS.**

Continued on next page.

Outside Mount


	OB Mounting Surface Required	Recommended Overlap - Width	Recommended Overlap - Height
Standard Shade	1 1/4"	1 1/2" each side	1 1/2" above
Ez Lift Continuous Cord Control	1 3/4"	1 1/2" each side	1 1/2" above
Motorized - Battery Powered	1 3/4"	1 1/2" each side	1 1/2" above
Motorized - AC Motor	1 3/4"	1 1/2" each side	1 1/2" above
Arch	inside mount only	N/A	N/A
Folding Panel (no valance or crown valance)	1 3/4"	3" each side	3" above
Folding Panel (woven wood valance)	2 1/2"	3" each side	3" above
Panel Track	1 3/4"	5" each side	2" above

Panel Length

The Folding Panel fabric length for an outside mount shade will measure 1" less than ordered height.

Product Stacking Considerations

The chart shows approximately how much of your window area will be covered when your window treatment is fully drawn open. If you feel too much of the window will be covered, consider Outside Mount. If space allows, mounting brackets can be raised higher above the window frame to reduce the area covered by the treatment.

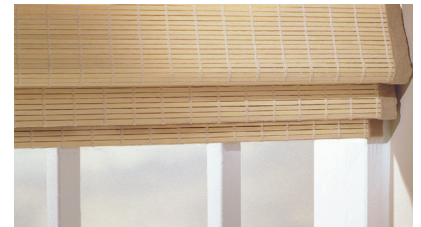

Stacking Chart

Shade Height	Standard Shade	Motorized Shade
36"	8"	1 1/2"
48"	8 1/2"	12"
60"	9"	12 1/2"
72"	10"	13 1/2"
84"	11"	14 1/2"
96"	12"	15 1/2"
108"	13"	16 1/2"
120"	14"	17 1/2"

Shade Width	Folding Panel
36"	6 3/8"
48"	7 1/4"
60"	8 1/8"
72"	9"
84"	9 7/8"
96"	10 3/4"
108"	11 5/8"
120"	12 1/2"
144"	14 1/4"

