




# HOW TO MEASURE: PLEATED SHADES

Please use a steel tape measure to ensure the proper measurements.  
 Measure to the nearest eighth of an inch (1/8").  
 Measure each window individually even if they look the same.  
 Always measure and record the width first, then height.  
 Reversing the width measurement for the height measurement is the most common ordering mistake.

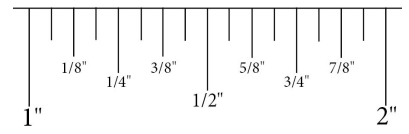

## Inside Mount

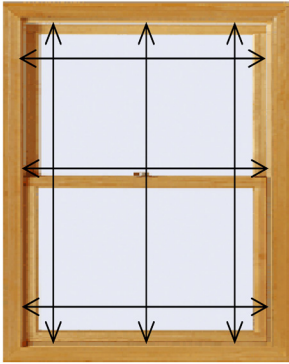

Step 1. Measure the width of the opening at the top, middle, and bottom of window. Record the narrowest of the 3 measurements. This is your ordering width. The factory will make the necessary deductions to ensure a proper fit. **DO NOT TAKE A DEDUCTION.**

Step 2. Measure the height of the opening on the left, center, and right. Record the longest of the 3 measurements. This is your ordering height.

Please note: Inside mount measurements represent the exact window opening, do not add to or subtract from your measurements.

Factory deductions:

All shade types except Cordless & Cordless Top Down - 3/8" from rail width and 1/2" fabric width.

Cordless and Cordless Top Down - 1/4" from rail width and 3/8" from fabric width.

### Minimum Depth


You'll need this much unobstructed depth, including cranks, handles, locks, etc., to inside mount this treatment.

### Flush Mount

For the face of your treatment to be flush with the wall or window frame, your frame depth must be the same or greater than the Flush Mount depth required.

Shade Type	Minimum Depth Required		Flush Mount	
	1" Pleated	2" Pleated	1" Pleated	2" Pleated
Standard Shade				
Arch, Half Arch, Eyebrow				
Angle (N/A on 2" Pleated)	1"	1 3/8" (Angle N/A)	1 9/16"	2 7/16"
Day-Night Shade				
Top Down/Bottom Up				
Skylight Shade	1 1/4"	N/A	1 5/8"	N/A
Cordless / Cordless TopDown				
Smooth Lift Continuous Cord	3/4"	3/4"	2 1/4"	2 1/4"
Motorized Shades				

## Outside Mount

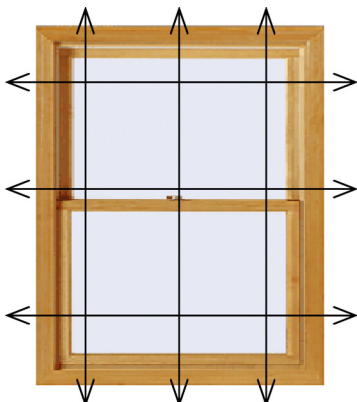

Step 1. Measure the width of the area you wish to cover. Measure in 3 places across the top, center and bottom of the window. Record the largest of the 3 measurements. We recommend adding overlap to reduce light leakage around the blind. See *Recommended Overlap*. This is your ordering width.


Step 2. Decide if the headrail will be installed on or above the window molding. You will need a flat surface area. Measure the height of the area you wish to cover. This is your ordering height.

Please note: Outside mount measurements represent the exact blind size. **PROVIDE EXACT DIMENSIONS.** Factory deductions: 1/8" from fabric width only.

Shade Type	OB Mounting Surface Required	Recommended Overlap - Width	Recommended Overlap - Height
Standard Shade			
Arch, Half Arch, Eyebrow			
Angle (N/A on 2" Pleated)	3/4"	1 1/2" each side	1 1/2" above
Day-Night Shade			
Top Down/Bottom Up			
Skylight Shade	3/4" above and below	1 1/2" each side	1 1/2" above and below
Cordless / Cordless TopDown			
Smooth Lift Continuous Cord	3/4"	1 1/2" each side	2" above
Motorized Shades			

## Product Stacking Considerations

The chart shows approximately how much of your window area will be covered when your window treatment is fully drawn open. If you feel too much of the window will be covered, consider Outside Mount. If space allows, mounting brackets can be raised higher above the window frame to reduce the area covered by the treatment.

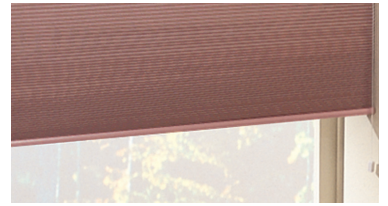

**Stacking Chart**

Pleated Shades				
Pattern	48" Height	72" Height	84" Height	96" Height
All 1" Pleated Patterns	2 1/2"	2 3/4"	2 7/8"	3"
All 1" Pleated Patterns with Liner	2 7/8"	3 1/8"	3 1/4"	3 3/8"
All 2" Pleated Patterns	1 7/8"	2 1/8"	2 1/4"	2 3/8"
All 2" Pleated Patterns with Liner	2 3/8"	2 3/4"	2 7/8"	3 1/8"

Top Down/Bottom Up add 1/2" to stack height.

Cordless, Motorized, Continuous Cord Shades				
Pattern	48" Height	72" Height	84" Height	96" Height
All 1" Pleated Patterns	3 1/2"	3 3/4"	3 7/8"	4"
All 1" Pleated Patterns with Liner	4"	4 1/4"	4 3/8"	4 1/2"
All 2" Pleated Patterns	2 7/8"	3 1/8"	3 1/4"	3 3/8"
All 2" Pleated Patterns with Liner	3 3/8"	3 5/8"	3 3/4"	3 7/8"

Cordless Top Down/Bottom Up add 5/8" to stack height.

**Liner not available on cordless pleated shades.**